



What should I do if my auto or POV is hazardous?

(1) Inspect for fuel leaks and for identifiable faults in the electrical system that could result in short circuit or other unintended electrical source of ignition. A motor vehicle or mechanical equipment showing any signs of leakage or electrical fault may not be transported.

(2) The fuel tank may not be more than one-fourth full. Check the gas indicator on the dash.

(3) Remove the ignition key from the ignition.

(4) Display the warning below on the container door, on a contrasting background and in size that is readily legible from a distance of 8 meters (26 feet):

WARNING-MAY CONTAIN EXPLOSIVE MIXTURES WITH AIR - KEEP IGNITION SOURCES AWAY WHEN OPENING

(5) Prepare hazardous material shipping documents.

When shipping an automobile as part of a household goods shipment, is the automobile hazardous?

The answer is yes, as long as it meets the conditions discussed here.